
Honeywell Thermostat Basic User Instructions

(Full instructions can be found on: http://www.honeywelluk.com/products/Programmable-Thermostats/Programmable-Thermostats/)

Controls Layout

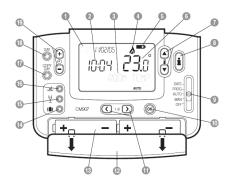

- Day / Date Display
- 2 Time Display
- 3 Dynamic Text Display
- 4 Heating On Indicator
- Battery Low Indicator
- 6 Temperature Display
- Program Buttons
- 12 Battery Compartment Lid
- 13 Battery Compartment
- Holiday Function Button
- 15 Party Function Button
- 16 Day Off Function Button

The thermostat can operate in three different modes:

· AUTO (automatic) mode

Automatic mode sets the thermostat to follow the temperature program. Operating the thermostat in this mode is the best way to maintain a high level of temperature comfort whilst maximising your energy savings.

· MAN (manual) mode

Manual mode sets the thermostat to act as a simple thermostat with a fixed setpoint throughout the day. The setpoint can be adjusted from 5°C to 35°C by using the gradient or will continue to maintain this temperature until another operating mode or

temperature is selected.

• OFF mode

Off mode sets the thermostat to control to a minimum temperature setting of 5°C (default) that acts as a frost protection measure for your home. This value can be adjusted by calling your installer.

AUTO mode:

Selecting AUTO mode will run the heating to the thermostats factory setting which has been set to provide normal heating requirements

Monday to Friday

Period	1	2	3	4	5	6
Time	6:30	8:00	12:00	14:00	18:00	22:30
Temperature	21°C	18°C	21°C	18°C	21°C	16°C

Saturday & Sunday

Period	1	2	3	4	5	6
Time	8:00	10:00	12:00	14:00	18:00	23:00
Temperature	21°C	21°C	21°C	21°C	21°C	16°C



Modifying the AUTO heating program

- a) Set the slider switch to PROG
- **b)** To adjust the period start time press the $\bigcirc \bigcirc \bigcirc$ buttons
- c) Press the green button to confirm the setting.
- d) The temperature setting for period 1 on Monday (MON) will now be flashing, to adjust this press the



- e) Press the green button to confirm the setting.
- f) The next time and temperature period will now be active. Adjust this by repeating steps **b e** above until all 6 periods are set for Monday.
- g) Once you have completed all 6 time settings 'DAY COMPLETE' will be displayed. You can now set the program for the next day.
- h) You can copy Mondays setting to the next day by pressing the COPY DAY button and 'COPY MON TO' will be displayed to change which day Monday gets copied to press the DAY button.
- i) You can program the next day instead by pressing the DAY button and repeating steps b) to g)
- j) To exit move the selector to either AUTO, MAN or OFF